

CONTROL LEVERS (Continued)

Illus. No.	Part No.	Description	Specifications	No. Req.
23	BS 22854	Shifting fork		2
24	BS 22855	Shifting fork screw	5/16"-24 thread	2
25	BZ 31045	STARTER PEDAL		1
26	BZ 3095	Starter pedal stop screw		1
27	BZ 122	Starter pedal stop screw lock nut		1
28	BZ 1015	Starter pedal taper pin	No. 2x1 1/4"	1
29	BS 31046	Starter pedal shaft		1
30	BZ 142	Starter pedal shaft key	Woodruff No. 6	2
31	GZ 22873	Starter pedal shaft lever		1
32	BZ 1015	Starter pedal shaft lever taper pin	2"x1 1/4"	1
32	GZ 719	Starter pedal shaft lever clevis pin		1
33	BS 13294	Starter pedal shaft lever spring		1
34	GZ 13295	Starter pedal shaft lever spring clip		1
35	GZ 22874	Starter pedal operating rod		1
36	BM 18192	Starter pedal operating rod oil cup		1

HAND BRAKE LEVER

...	BS 29065	HAND BRAKE LEVER ASSEMBLY		1
1	BS 29067	Hand brake lever		1
...	BS 62331	Hand brake lever bushing		1
2	BS 62332	Hand brake lever bracket		1
3	BR 1308	Hand brake lever bracket bolt	3/8"-16x1 1/8"	1
...	BM 110	Hand brake lever bracket bolt nut	3/8"-16x 3/8"	1
4	BS 62333	Hand brake lever shaft		1
...	BS 70495	Hand brake lever shaft taper pin	No. 2x1"	1
5	BS 62334	Brake lever pivot spring		1
6	BS 29071	Hand brake lever pull rod pivot		1
...	BR 611	Hand brake lever pull rod front nut	5/16"-24x17/64"	1
7	BS 62327	Latch—inside		1
8	BS 62328	Latch—outside		1
9	BZ 8683	Latch clevis pin	5/16"x1"	1
...	BM 12440	Latch clevis pin	1/4"x59/64"	1
10	BS 62329	Latch spring		1
11	BS 62330	Latch spring hook		1
12	BS 29069	Latch rod		1
13	BS 22861	Latch grip		1
14	BS 12123	Latch grip screw	No. 10-32x13/16"	1
...	BS 7435	Latch grip screw nut	No. 10-32x 1/8"	1
15	BS 62872	Ratchet		2
16	BS 6705	Ratchet bolt	3/8"-16x2 1/8"	2
...	BM 110	Ratchet bolt nut	3/8"-16x 3/8"	2
17	BS 62325	Ratchet spacer		2
18	BS 62326	Ratchet frame spacer		2

PEDAL CONTROL


...	GZ 31029	PEDAL CONTROL ASSEMBLY		1
1	BZ 24889	PEDAL BRACKET ASSEMBLY (Includes bushing)		1
...	GZ 24888	Pedal bracket bushing		2
...	BR 1308	Pedal bracket bolt		4
2	GZ 31032	Brake pedal assembly		1
...	BZ 25447	Brake pedal bushing		1
3	BX 18341	Brake pedal set screw		1
...	BZ 5402	Brake pedal set screw nut		1
5	GZ 31031	Clutch pedal assembly		1
6	BZ 1015	Clutch pedal taper pin		1
7	GZ 31037	Clutch pedal shaft		1
...	BZ 115	Clutch pedal shaft key		1
8	BZ 30744	Clutch pedal shaft lever		1
...	BZ 1015	Clutch pedal shaft lever taper pin		1
9	BZ 23083	Clutch pedal spring		1
10	BY 3212	Clutch pedal clevis pin		1
11	BZ 29544	Clutch pedal link		1
12	BZ 23531	Clutch pedal adjustable link		1
...	BZ 62	Clutch pedal adjustable link nut		1
...	BY 3212	Clutch pedal adjustable link clevis pin		1


VACUUM TANK CONNECTIONS AND GASOLINE PIPES

NOTE: We do not carry in stock vacuum tank assemblies or service parts for them. All matters pertaining to replacements should be taken up direct with the Stewart-Warner Speedometer Corp., Chicago, Ill.


...	BM 12370	Vacuum tank to dash bolt	1/4"-20x1 1/2"	4
...	BM 272	Vacuum tank to dash bolt nut	1/4"-20x 1/4"	4
...	BM 11829	Union elbow	1/8" pipe x 1/2"-20	1

When ordering give letter prefix with symbol number—Example: CX 28960.

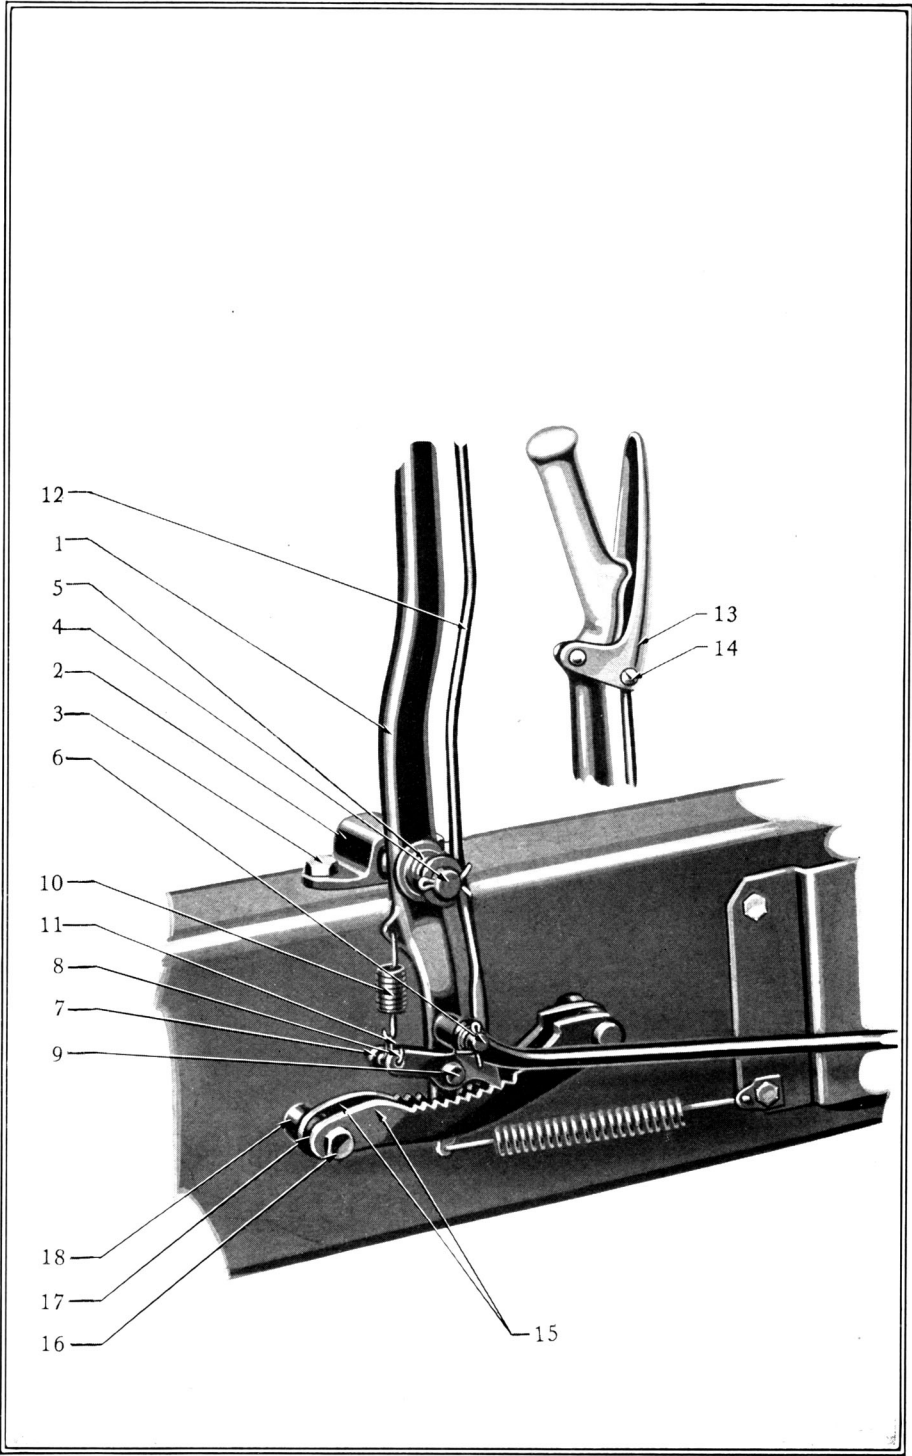

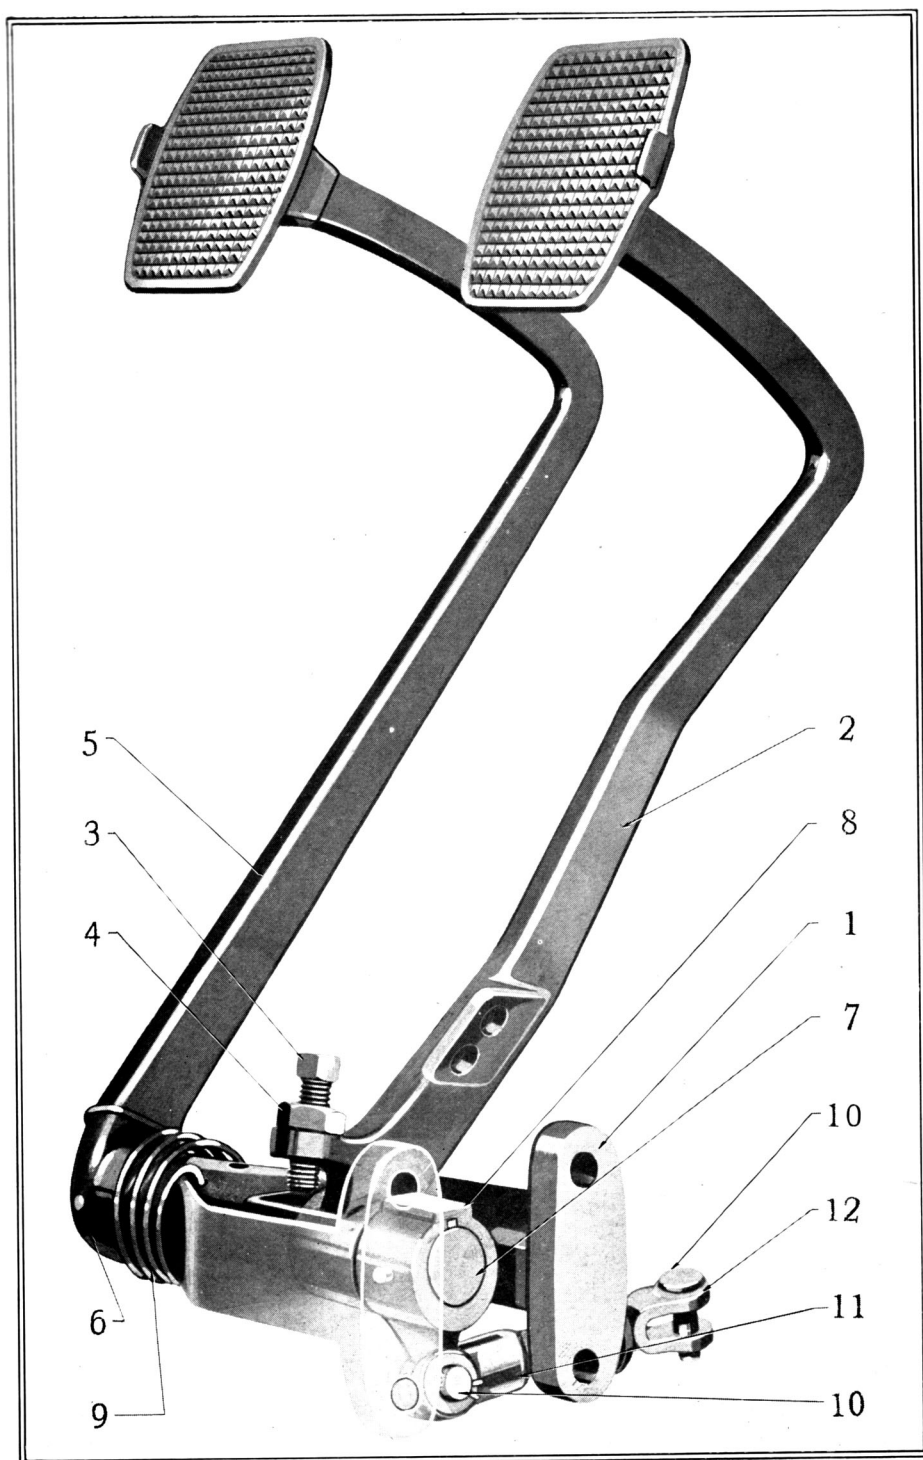

Pedal Control

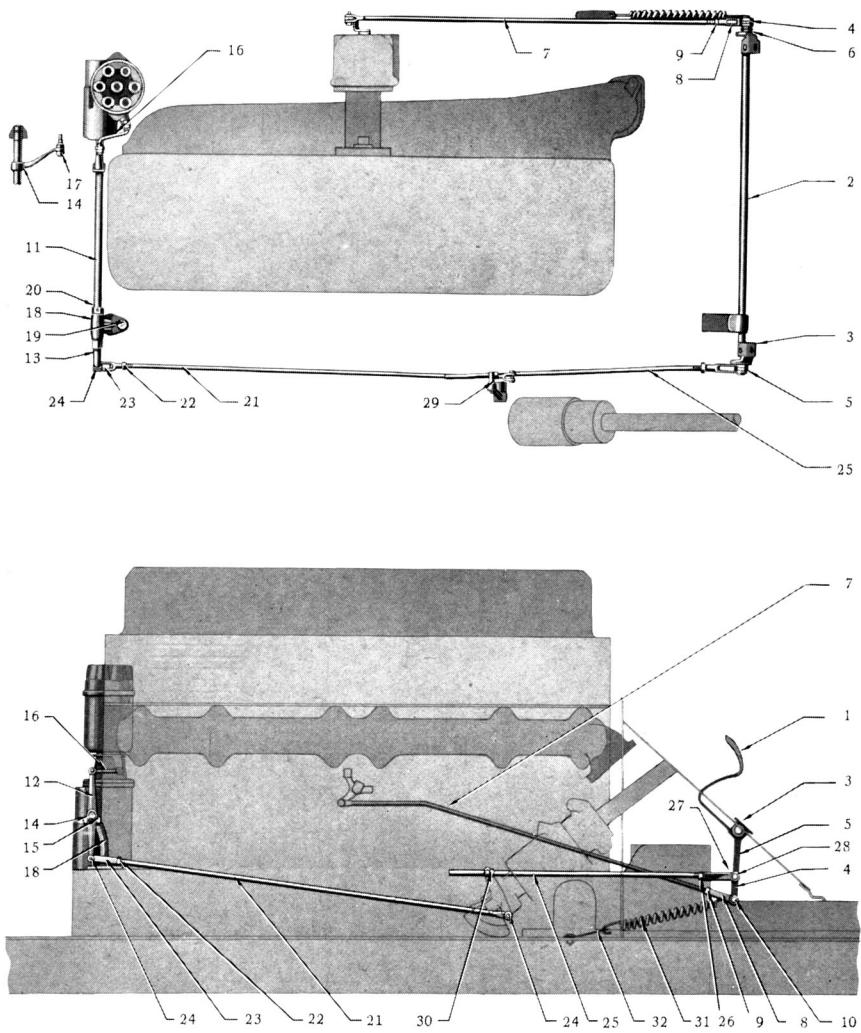

VACUUM TANK CONNECTIONS AND GASOLINE PIPES (Continued)

Illus. No.	Part No.	Description	Specifications	No. Req.
...	GO 31013	Gas tank to vacuum tank pipe assembly		1
...	BM 11828	Gas tank to vacuum tank pipe union nut	$\frac{1}{2}$ "-20x5/16"	2
...	GO 13733	Gas tank to vacuum tank pipe clip		7
...	BO 12126	Gas tank to vacuum tank pipe clip screw	No. 10-32x $\frac{5}{8}$ "	4
...	BZ 12799	Gas tank to vacuum tank pipe clip screw nut	No. 10-32x $\frac{1}{8}$ "	4
...	BM 31389	Vacuum tank to carburetor pipe assembly		1
...	BM 11828	Vacuum tank to carburetor pipe union nut	$\frac{7}{16}$ "-20x $\frac{1}{4}$ "	2
...	BO 31391	Vacuum tank to manifold pipe assembly		1
...	BM 11828	Vacuum tank to manifold pipe union nut		2
...	BZ 31355	Vacuum tank and windshield wiper suction connection		1

CARBURETOR

The carburetor and riser assembly and all its parts will be serviced directly through the Marvel Carburetor Company, Flint, Michigan.

ACCELERATOR

1	BZ 61517	Accelerator pedal		1
...	BZ 7911	Accelerator pedal taper pin	No. 00x $\frac{3}{4}$ "	1
2	BZ 25327	Shaft		1
3	BZ 29469	Bracket—cross shaft to toe plate		2
4	BZ 60574	Shaft lever—long		1
5	BZ 25364	Shaft lever—short		1
...	BZ 7911	Shaft lever taper pins	No. 00x $\frac{3}{4}$ "	2
6	BZ 22699	Shaft silencing spring		1
7	BZ 29455	Shaft to carburetor rod		1
8	BZ 5771	Shaft to carburetor rod yoke	$\frac{3}{16}$ "-32	1
9	BZ 12799	Shaft to carburetor rod nut	No. 10-32x $\frac{1}{8}$ "	1
10	BZ 5825	Shaft to carburetor rod clevis pin	$\frac{3}{16}$ "x11/16"	2
...	BZ 81823	MIXTURE CONTROL ASSEMBLY		1
...	BZ 29198	Mixture control wire tube clip		1
...	BZ 82690	Mixture control shaft and wire assembly		1
...	BO 70121	Mixture control shakeproof lockwasher		1
...	BO 70122	Mixture control nut		1

SPARK AND THROTTLE CONTROL

SPARK CONTROL

11	GZ 30190	Cross tube		1
12	GZ 30196	Cross tube lever—R. H.		1
13	BZ 13532	Cross tube lever—L. H.		1
14	BZ 14446	Cross tube lever clamp bolt	$\frac{1}{4}$ "-28x1" special	1
15	BM 794	Cross tube lever clamp bolt nut	$\frac{1}{4}$ "-28x7/32"	1
...	BZ 7911	Straight pin—lever to tube		1
16	BZ 23161	Lever to distributor link		1
17	BZ 12799	Lever to distributor link nut	No. 10-32	2
18	BZ 13527	Cross tube bracket		1
19	BM 219	Cross tube bracket bolt	$\frac{5}{16}$ "-18x $\frac{3}{4}$ "	1
20	BZ 30191	Cross tube collar		1
21	BZ 29459	Steering gear to control shaft rod		1
22	BZ 12799	Steering gear to control shaft rod nut	No. 10-32	1
23	BZ 5771	Steering gear to control shaft rod yoke	$\frac{3}{16}$ "-32	1
24	BZ 5825	Steering gear to control shaft rod clevis pin	$\frac{3}{16}$ "x11/16"	2

THROTTLE CONTROL

25	BZ 30193	Throttle control rod		1
26	BM 794	Throttle control rod nut	$\frac{1}{4}$ "-28x7/32"	1
27	BZ 5774	Throttle control rod clevis	$\frac{1}{4}$ "-28 thread	1
28	BZ 8682	Throttle control rod clevis pin	$\frac{1}{4}$ "x7/8"	1
29	BZ 29460	Throttle control trunnion		1
30	BZ 29461	Throttle control rod collar		1
31	BZ 13542	Throttle control spring		1
32	BZ 25365	Throttle control spring clip		1

HEAT CONTROL

...	BZ 79754	DIAL ASSEMBLY		1
...	BO 70124	Dial attaching screw		4
...	BZ 79471	Operating lever		1
...	BZ 29195	Operating lever spring		1
...	BZ 29190	Operating lever bracket		1
...	BZ 7343	Operating lever bracket clevis pin	$\frac{3}{8}$ "x1-9/16"	1
...	BZ 18448	Operating lever bracket rivet	No. 9x $\frac{1}{4}$ " tubular	3
...	BZ 79469	Operating rod		1
...	BM 794	Operating rod nut	$\frac{1}{4}$ "-28x7/32"	1
...	GZ 70154	Operating rod clevis	$\frac{1}{4}$ "-28	1

When ordering give letter prefix with symbol number—Example: CX 28960.


HEAT CONTROL (Continued)

Illus. No.	Part No.	Description	Specifications	No. Req.
...	BZ 8682	Operating rod clevis pin.....	$\frac{1}{4} \times \frac{7}{8}$ "	2
...	BZ 70156	Clevis pin.....	$\frac{1}{4} \times 9/32$ "	1

BRAKE CONTROL

1	BZ 31184	Brake rod—front brake to front idler lever.....		2
2	BZ 29243	Brake rod spring—front end.....		2
3	BZ 29244	Brake rod nut—front end.....		2
4	BR 611	Brake rod lock nut—front end.....		2
5	BZ 31183	Brake rod—front idler lever front to cross shaft lever.....		2
6	BZ 8683	Clevis pin—front idler lever.....		4
7	BZ 31182	Brake rod—front cross shaft to rear cross shaft.....		1
...	BZ 8683	Clevis pin—front cross shaft to rear cross shaft rod.....		2
8	BZ 29287	Play link—front cross shaft to rear cross shaft rod.....		1
9	BZ 31186	Brake rod—rear cross shaft to rear idler lever.....		2
...	BZ 8683	Clevis pin—rear cross shaft to rear idler lever rear.....		2
10	BZ 70301	Clevis pin—rear cross shaft to rear idler lever front.....		2
11	BZ 31185	Brake rod—rear idler lever to rear brake.....		2
...	BZ 29243	Brake rod spring—rear end.....		2
...	BZ 29244	Brake rod nut—rear end.....		2
...	BR 611	Brake rod lock nut—rear end.....		2
12	BZ 31008	Brake rod—hand brake to rear cross shaft lever.....		1
13	BZ 31187	Slide yoke—hand brake to rear cross shaft lever rod.....		1
...	BZ 70301	Clevis pin—hand brake to rear cross shaft lever rod.....		1
14	BZ 31177	Front idler lever.....		2
15	BZ 29265	Front idler lever pivot.....		2
16	BZ 124	Front idler lever pivot nut.....		2
17	BZ 70119	Front idler lever pivot nut washer.....		4
18	BZ 31173	Front cross shaft lever—center and ends.....		3
19	BZ 275	Front cross shaft lever bolt.....		3
20	BM 110	Front cross shaft lever bolt nut.....		3
21	BZ 31176	Rear cross shaft lever—outer.....		2
...	BZ 275	Rear cross shaft lever bolt.....		2
...	BM 110	Rear cross shaft lever bolt nut.....		2
22	BZ 31175	Rear cross shaft lever—inner.....		1
...	BZ 275	Rear cross shaft lever bolt.....		1
...	BM 110	Rear cross shaft lever nut.....		1
23	BZ 31178	Rear idler lever.....		4
24	BZ 31158	Rear idler lever support.....		2
25	BZ 3205	Clevis pin—rear idler lever to support.....		2
26	BZ 31174	Front cross shaft to pedal rod lever.....		1
...	BZ 275	Front cross shaft to pedal rod bolt.....		1
...	BM 110	Front cross shaft to pedal rod bolt nut.....		1
27	BZ 31181	Brake rod—brake pedal to front cross shaft.....		1
28	BZ 5282	Yoke end—brake pedal to front cross shaft rod.....		1
29	BZ 62	Nut—brake pedal to front cross shaft rod.....		2
30	BY 3212	Clevis pin—brake pedal to front cross shaft rod.....		2
31	BZ 31011	Spring—stoplite to brake pedal.....		1
32	BZ 31010	Spring—brake pedal release.....		1
33	BZ 31009	Spring—rear brake release.....		1
34	BZ 30868	Clip—rear brake release spring.....		1
35	BZ 29274	Spring—hand brake release.....		1
36	BZ 29273	Clip—hand brake release spring.....		1
37	BZ 31163	BRAKE CROSS SHAFT BEARING PLATE ASSEMBLY— front and rear outer.....		4
38	BZ 31169	Brake cross shaft bearing plate roller.....		12
39	BZ 31170	Brake cross shaft bearing plate roller bolt.....		4
40	BZ 12481	Brake cross shaft bearing plate roller bolt nut.....		4
41	BZ 31171	Brake cross shaft bearing plate roller rivet.....		12
42	BZ 31172	Brake cross shaft bearing plate roller washer.....		8
43	BZ 1062	Bolt—bearing plate assembly to frame.....		8
44	BZ 2344	Nut—bearing plate assembly to frame bolt.....		8
45	BZ 31165	BRAKE CROSS SHAFT BEARING PLATE ASSEMBLY— front to center.....		1
...	BZ 31169	Brake cross shaft bearing plate roller.....		2
...	BZ 31171	Brake cross shaft bearing plate roller rivet.....		2
46	GZ 119	Bolt—bearing plate assembly to cross member.....		2
...	BM 110	Nut—bearing plate assembly to cross member.....		2
47	BZ 31167	BRAKE CROSS SHAFT BEARING PLATE ASSEMBLY— rear center.....		1
...	BZ 31169	Brake cross shaft bearing plate roller.....		2
...	BZ 31171	Brake cross shaft bearing roller rivet.....		2
...	GZ 119	Bolt—bearing plate assembly to cross member.....		2
...	BM 110	Nut—bearing plate assembly to cross member bolt.....		2
48	BZ 31161	Brake cross shaft—front.....		1
49	BZ 31162	Brake cross shaft—rear.....		1
50	BZ 2360	Brake cross shaft Woodruff key.....		7

When ordering give letter prefix with symbol number—Example: CX 28960.

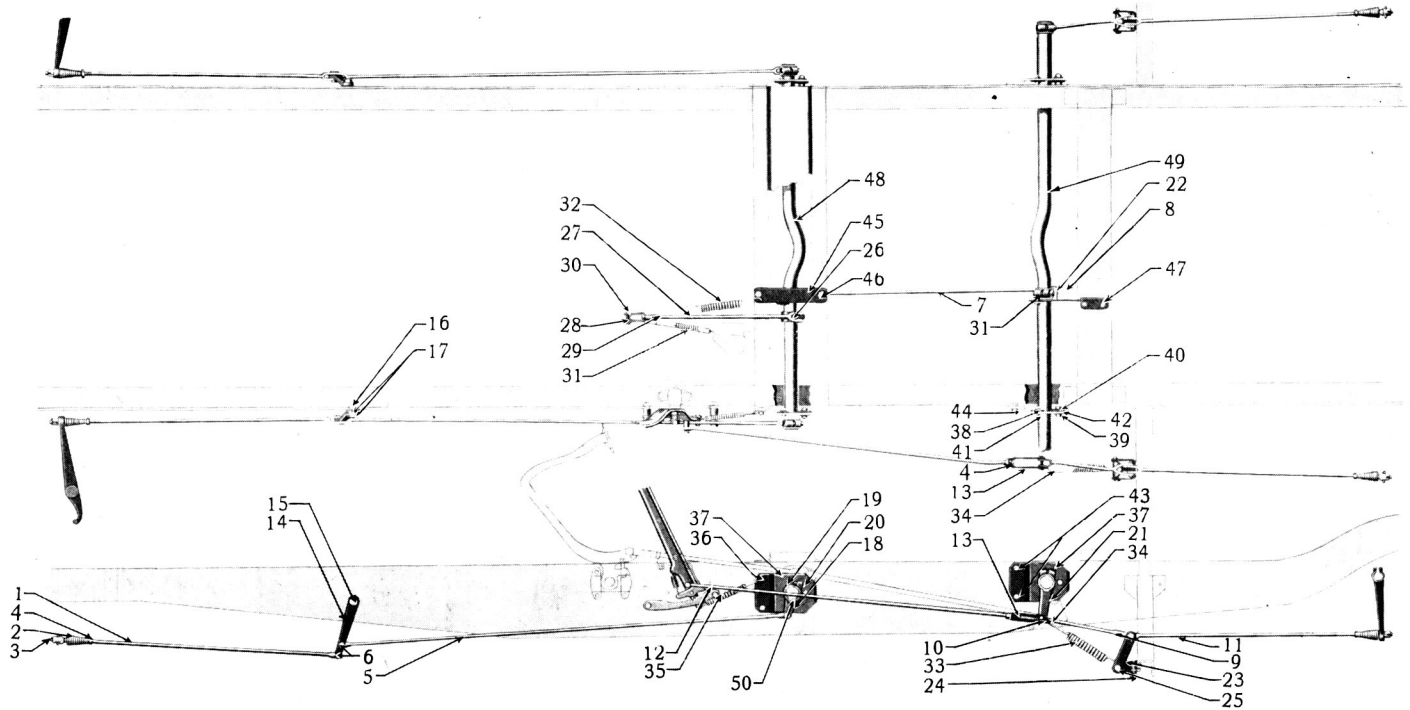

Brake Control (Rods and Levers)


UNIVERSAL JOINTS AND PROPELLER SHAFT

Illus. No.	Part No.	Description	Specifications	No. Req.
...	CZ 31484	REAR UNIVERSAL JOINT AND PROPELLER SHAFT ASSEMBLY		1
1	CZ 31022	Propeller shaft		1
...	BZ 20040	FRONT UNIVERSAL JOINT ASSEMBLY (Includes 9905, also 18106 to 20145 inclusive)		1
2	GZ 31138	Companion flange—front		1
3	BZ 9906	Companion flange—rear		1
4	BZ 18106	Companion flange bolt		12
5	BR 611	Companion flange bolt nut		12
6	BZ 23273	Companion flange bolt nut lock		12
7	BZ 7840	Flange yoke		2
8	BZ 1067	Bushing		8
9	BZ 1065	Bushing lock ring		8
10	BZ 7836	Cross		2
11	BZ 7843	Inside casing		2
12	BZ 7833	Outside casing		2
13	BZ 7835	Outside casing packing		2
14	BZ 9773	Lubrication plug		2
15	BZ 20146	Outside casing spring		2
16	BZ 20147	Outside casing spring retainer		2
17	BZ 18052	Outside casing spring retainer bolt		4
18	BZ 12799	Outside casing spring retainer bolt nut		4
19	BZ 7834	Dust cap		1
20	BZ 7831	Dust cap felt washer		1
21	BZ 7832	Dust cap felt washer retaining disc		1
22	BZ 20145	Sleeve yoke		1

STEERING GEAR

...	CZ 31215	STEERING GEAR COMPLETE		1
...	CZ 31655	CONTROL ASSEMBLY		1
...	BZ 31651	CASE AND GEARS COMPLETE		1
1	BZ 31653	CASE ASSEMBLY		1
2	BZ 31676	Case adjustment stud		1
3	BZ 29740	Case eccentric adjusting sleeve		1
4	BZ 29744	Case eccentric adjusting sleeve lock ring		1
5	BZ 70571	Case clamp bolt	7/16"-20x2 7/8"	1
...	BZ 232	Nut—case clamp bolt	7/16"-20x 7/8"	1
6	BZ 29746	Case stud		3
7	BZ 70194	Nut—case stud		3
8	BZ 63044	Eccentric rivet		1
9	BZ 31651	Lower control bracket		1
10	BZ 31673	Cork washer—lower control bracket		1
11	BZ 31675	Spring washer—lower control bracket oil retainer		1
12	BZ 30935	Gasket—lower control bracket		1
13	BZ 18358	Lower control bracket machine screw	1/4"-20x3/4"	2
14	BZ 9182	Lower control bracket bolt	1/4"-20x1"	1
15	BZ 31661	Case cover		1
16	BZ 31672	Gasket—case cover		1
17	BZ 30514	Bracket—frame		1
...	BZ 70140	Bolt—frame bracket	1/8"-20x1 3/8"	2
...	BZ 72	Nut—frame bracket bolt	1/8"-20x9/16" castle	2
18	BZ 31664	Main column tube		1
19	BZ 31666	WORM		1
...	BZ 8394	Worm key		1
20	BZ 31679	Roller bearing cage—column		2
21	BZ 31680	Cup—roller bearing cage		2
22	BZ 31656	ADJUSTING SLEEVE ASSEMBLY (Includes cups)		1
23	BZ 30829	ROLLER TOOTH AND SHAFT ASSEMBLY		1
24	BZ 29749	Bushing—roller tooth and shaft		2
25	BZ 22641	Nut—roller tooth shaft		1
26	BZ 20005	Lock—roller tooth shaft nut		1
27	BZ 29750	Thrust washer—roller tooth shaft		1
28	BZ 29748	Screw—roller tooth shaft adjusting		1
29	BZ 70201	Nut—roller tooth shaft adjusting screw		1
30	BZ 31670	Arm—roller tooth shaft (steering)		1
31	BZ 30165	Adjusting screw—adjusting sleeve		1
32	BZ 70278	Nut—adjusting sleeve screw		1
33	BZ 31678	Dust washer—adjusting sleeve		1
34	BZ 30934	Retainer—adjusting sleeve dust washer		1
35	CZ 30316	STEERING WHEEL ASSEMBLY		1
36	BZ 8394	Key—steering wheel		1
37	BZ 26145	Nut—steering wheel		1
38	CZ 30930	JACKET TUBE AND BUSHING ASSEMBLY		1
39	BZ 30791	Bushing—jacket tube—lower		1

When ordering give letter prefix with symbol number—Example: CX 28960.

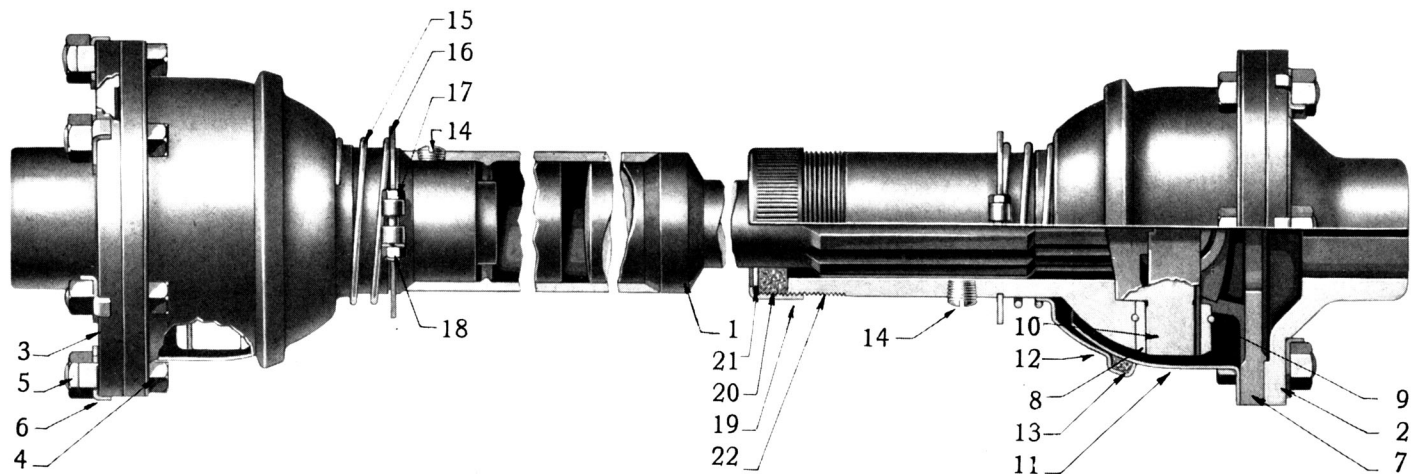

Universal Joints and Propeller Shaft Assembly

STEERING GEAR (Continued)

Illus. No.	Part No.	Description	Specifications	No. Req.
40	BZ 30933	Clamp—jacket tube to adjusting sleeve		1
...	BZ 70545	Bolt—jacket tube clamp	5/16"-24x2"	1
...	BZ 70543	Nut—jacket tube clamp bolt	5/16"-24x17/64"	1
42	BZ 80593	Jacket tube bracket		1
43	GZ 18338	Screw—jacket tube bracket	5/16"-18x1"	1
44	BZ 31683	STATIONARY TUBE ASSEMBLY		1
45	BZ 30489	Stationary tube silencer—upper		1
46	BZ 30761	Stationary tube silencer—lower		1
47	CZ 31684	THROTTLE TUBE ASSEMBLY		1
48	BZ 30497	Throttle tube hand lever		1
49	BZ 30496	Throttle tube hand lever lock wire		1
50	BZ 10137	Throttle tube pinion		1
51	BZ 18357	Clamp screw—throttle tube pinion	1/4"-20x3/8"	1
52	BZ 29559	Throttle sector		1
53	CZ 31685	SPARK TUBE ASSEMBLY		1
54	BZ 63062	Spark tube hand lever		1
55	BZ 10140	Spark tube pinion		1
56	BZ 18358	Screw—spark tube pinion	1/4"-20x3/4"	1
57	BZ 29561	Sector stud		1
58	BZ 29562	Spring—sector stud		1
59	BZ 29560	Spark sector		1
60	BZ 30538	Lock wire		1
61	CZ 31686	LIGHT TUBE ASSEMBLY		1
62	BZ 30507	Light control lever		1
63	BZ 30508	Lock wire—light control lever		1
...	BZ 30797	Control cup friction band		1
64	BZ 30308	Light control switch—lower		1
65	BZ 30539	Light control switch anchor		1
66	BZ 30590	Clamp nut—light tube—lower		1
67	BZ 30509	HORN BUTTON		1
68	BZ 62088	Horn button contact washer		1
69	BZ 30513	Horn button spring		1
70	BZ 30317	Stationary tube cup		1
71	BZ 30327	Lock wire—stationary tube cup		1
72	BZ 30823	Horn wire assembly		1

DRAG LINK

...	CZ 31210	DRAG LINK ASSEMBLY		1
...	CZ 31212	Drag link		1
...	BZ 23740	Ball seat		4
...	BZ 23739	Plug	1-3/16"-18 thread	2
...	BZ 23738	Spring		2
...	BZ 9844	Front boot		1
...	BZ 22166	Rear boot		1

FENDERS


Specify color of fenders required or prime coat. Give car number if for a specific car.

...	A 81250	Front fender—R. H. (Pocket type) (standard equipment)		1
...	A 81251	Front fender—L. H. (standard equipment)		1
...	A 81252	Front fender—L. H. (Pocket type) (special equipment)		1
...	A 81248	Rear fender—R. H. (Sedan and Coach)		1
...	A 81249	Rear fender—L. H. (Sedan and Coach)		1
...	A 81898	Rear fender—R. H. (Landau Sedan)		1
...	A 81899	Rear fender—L. H. (Landau Sedan)		1
...	A 81900	Rear fender—R. H. (Victoria)		1
...	A 81901	Rear fender—L. H. (Victoria)		1
...	A 81896	Rear fender—R. H. (Phaeton and Town Sedan)		1
...	A 81897	Rear fender—L. H. (Phaeton and Town Sedan)		1
...	A 79835	Rear fender—R. H. (Coupe and Roadster)		1
...	A 79836	Rear fender—L. H. (Coupe and Roadster)		1
...	BM 304	Bolt—Front fender	3/8"-16x1"	6
...	BM 110	Nut—Front fender bolt	3/8"-16x3/4"	6
...	BM 219	Bolt—Front fender	5/16"-18x3/4"	2
...	BO 18447	Screw—Front and rear fender	No. 10-32x5/8" Rd. Hd.	22
...	BZ 12799	Nut—Front and rear fender screw	No. 10-32x1 1/8"	22
...	GZ 10214	Bolt—Rear fender	1/2"-13x1 1/4"	6
...	BO 23410	Clip—Rear fender		14
...	BZ 12275	Screw—Rear fender clip		14
...	GO 23883	Plate—Rear fender		4

RUNNING BOARD AND RADIATOR SPLASH GUARDS

...	A 81052	Running board splash guard—R. H.		1
...	A 81053	Running board splash guard—L. H.		1

When ordering give letter prefix with symbol number—Example: CX 28960

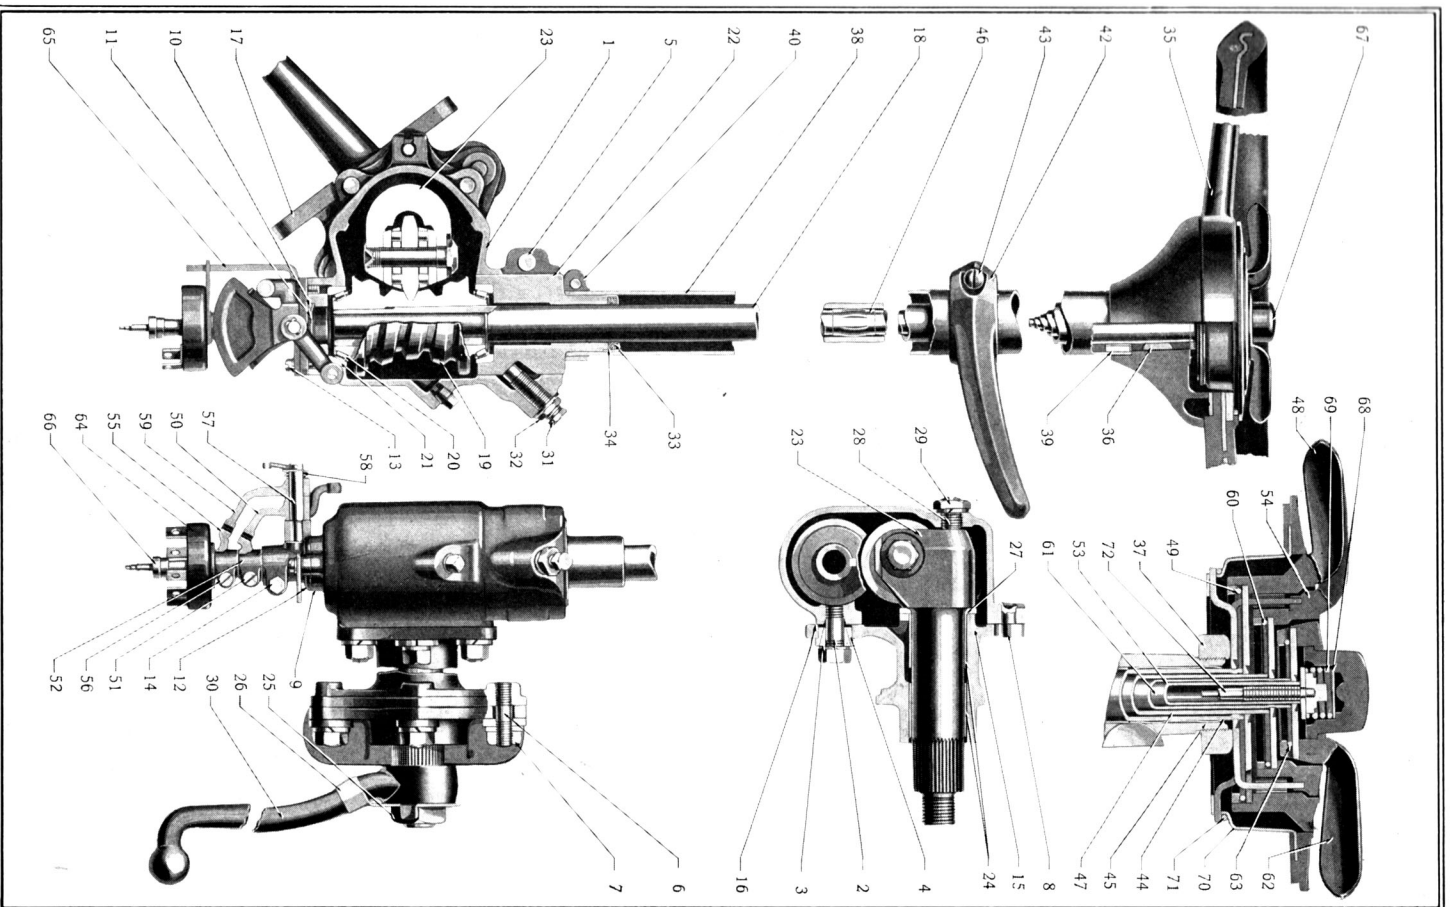

Steering Gear Assembly

RUNNING BOARD AND RADIATOR SPLASH GUARDS (Continued)

Illus. No.	Part No.	Description	Specifications	No Req.
...	BZ 12799	Splash guard screw		4
...	BO 18447	Machine screw (splash guard)		4
...	A 81086	Radiator splash guard		1
...	GO 22949	Radiator splash guard shim		1
...	A 13166	Flywheel guard		1

REAR DUST SHIELD ASSEMBLY

...	A 81698	REAR DUST SHIELD ASSEMBLY		1
...	BO 70149	Machine screw	$\frac{1}{4}$ "-20x1 $\frac{1}{4}$ "	4

MOTOR SPLASH GUARDS

...	A 30275	Motor splash guard—front		1
...	A 30276	Motor splash guard—R. H.		1
...	A 30277	Motor splash guard—L. H.		1
...	GY 553	Screw—Front motor splash guard	$\frac{1}{4}$ "-20x $\frac{3}{8}$ "	4
...	GY 3820	Screw—Splash guard—R. H. and L. H.	$\frac{5}{16}$ "-18x $\frac{1}{2}$ "	7
...	BO 12126	Screw—Motor splash guard	No. 10-32x $\frac{3}{8}$ "	16
...	BZ 12799	Nut—Motor splash guard screw	No. 10-32x $\frac{1}{8}$ "	16

RUNNING BOARD

...	CZ 81147	RUNNING BOARD ASSEMBLY		2
...	BO 18447	Screw—round head—running board	No. 10-32x $\frac{3}{8}$ "	12
...	BZ 12799	Nut—running board screw	No. 10-32x $\frac{3}{8}$ "	12
...	CZ 81254	Outer moulding		2
...	CZ 82218	Moulding—inner and ends		2
...	BZ 18107	Rivet—split	9/64"x $\frac{3}{8}$ "	80
...	CZ 81190	Running board covering		2

TIRE CARRIER (Fender Type)

(Standard Equipment)

...	BZ 81732	Spare tire lock		1
...	BO 31240	Spare tire lock key		1
...	BZ 81680	Spare tire to dash brace assembly		1
...	BZ 9130	Spare tire to dash brace nut		1
...	BZ 70505	Spare tire to dash brace rubber ferrule		1
...	BZ 81679	Spare tire to dash bracket		1
...	BZ 1430	Spare tire to dash bracket screw		3
...	BZ 122	Spare tire to dash bracket screw nut		1
...	BZ 81267	Front fender stirrup—R. H.		1
...	BZ 81676	Spare tire clamp		3
...	BZ 81677	Spare tire clamp bolt		1
...	BZ 81678	Spare tire clamp bolt tee nut		1
...	BZ 81706	Spare tire strap assembly		1

SPECIAL EQUIPMENT

The following parts are necessary when pocket fender tire carrier is desired for left side.

...	A 81252	Front fender assembly—L. H.		1
...	BZ 80610	Front fender rear reinforcement		1
...	BZ 52961	Front fender rear reinforcement bolt		2
...	BZ 122	Front fender rear reinforcement bolt nut		2
...	BZ 81268	Front fender stirrup—left		1
...	BZ 81681	Tire to dash brace assembly		1
...	BZ 9130	Tire to dash brace check nut		1
...	BZ 70505	Tire to dash brace rubber ferrule		1
...	BZ 81679	Spare tire to dash bracket		1
...	BZ 1430	Spare tire to dash bracket screw		3
...	BZ 122	Spare tire to dash bracket screw nut		3
...	BZ 81676	Spare tire clamp		1
...	BZ 81677	Spare tire clamp bolt		1
...	BZ 81678	Spare tire clamp bolt tee nut		1
...	BZ 81706	Spare tire strap assembly		1
...	BZ 82529	Tire cover (Landau Sedan)		1
...	BZ 82530	Tire cover (Victoria)		1
...	BZ 81732	Spare tire lock		1
...	BO 31240	Spare tire lock key		1

BONNET

...	A 81131	BONNET COMPLETE (Specify color or prime coat)		1
...	BO 80345	Handle		2
...	BZ 70336	Handle rivet—tubular	$\frac{7}{32}$ "x $\frac{1}{4}$ "	4
...	BO 25802	Bonnet lock catch		4
...	BZ 70336	Lock catch rivet—tubular	$\frac{7}{32}$ "x $\frac{1}{4}$ "	12

When ordering give letter prefix with symbol number—Example: CX 28960.

BONNET LOCK ASSEMBLY

Ilus. to.	Part No.	Description	Specifications	No. Req.
..	BO 80343	BONNET LOCK ASSEMBLY		4
..	GO 18342	Machine screw	No. 10-32x $\frac{3}{4}$ " Rd. Hd.	8
..	BZ 12799	Nut	No. 10-32x $\frac{3}{4}$ "	8

HEAD LAMP TIE BAR

..	CZ 81559	Head lamp tie bar		1
..	BZ 81557	Head lamp bracket—R. H.		1
..	BZ 81558	Head lamp bracket—L. H.		1
..	BO 70011	Bolt	7/16"-14x1 $\frac{3}{4}$ "	2
..	BY 551	Nut	7/16"-14x7/16"	1
..	BM 304	Bolt	3/4"-16x1"	2
..	BZ 81567	License bracket		2
..	BZ 12799	Nut	No. 10-32x $\frac{1}{8}$ "	2
..	BO 70227	Screw	No. 10-32x1-3 16"	2

SIDE LAMP BRACKET

..	BO 81566	SIDE LAMP BAND		1
..	BO 81562	Side lamp bracket—R. H.		1
..	BO 81563	Side lamp bracket—L. H.		1
..	BO 70185	Bolt—band to cowl		14
..	BO 12120	Nut—band to cowl bolt		14
..	BO 70502	Acorn nut—side lamp bracket		2
..	BO 79786	Leather washer—side lamp band		16

HEAD LAMP

..	BO 31247	HEAD LAMP COMPLETE		2
..	BO 30778	Spacer—lamp to bracket		2
..	BO 70513	Washer—lamp to bracket		2
..	BO 31252	Nut—lamp to bracket		2
..	BO 31292	DOOR ASSEMBLY (less lens)		2
..	BO 31295	Screw—door		2
..	BO 30060	Retainer—door screw		2
..	BO 30913	Lens		2
..	BO 30440	Gasket—lens		2
..	BO 30365	Spring—lens		8
..	BO 30443	REFLECTOR ASSEMBLY		2
..	BO 31279	CONNECTOR WIRES AND SOCKET ASSEMBLY		2
..	BO 70353	Focus screw		2
..	BO 30370	Packing—focus screw		2
..	BO 30357	Packing washer—focus screw		2
..	BO 30439	Spring—focus screw		2
..	BO 30369	Cam—focus screw		2
..	BO 30373	Cam pin (slotted head)		2
..	BO 30358	Spring—cam pin		2
..	BO 30374	Arm—cam		2
..	BO 30351	Terminal socket sleeve		2
..	BO 30350	Terminal socket		2
..	BO 30348	CONDUIT AND CAP ASSEMBLY		2
..	BO 70349	Nut—conduit to radiator		2

SIDE LAMPS

..	BO 31248	SIDE LAMP COMPLETE—R. H.		1
..	BO 31249	SIDE LAMP COMPLETE—L. H.		1
..	BO 31301	SIDE LAMP DOOR ASSEMBLY (less lens)		2
..	BO 30659	Lens		2
..	BO 70422	Screw—door		2
..	BO 30425	Gasket—lens		2
..	BO 30406	Spring—lens		4
..	BO 31302	Conduit—wire		2
..	BO 30423	REFLECTOR ASSEMBLY		2
..	BO 31397	WIRE ASSEMBLY		2

STOP AND TAIL LAMP

..	BZ 31250	STOP AND TAIL LAMP ASSEMBLY		1
..	BZ 70313	Nut	$\frac{1}{4}$ "-20x3 16"	2
..	BZ 30136	Terminal complete		1
..	BZ 31306	Door		1
..	BZ 30379	Door glass (red)		1
..	BZ 70365	Screw (door)		2

When ordering give letter prefix with symbol number—Example: CX 28960.

STOP AND TAIL LAMP (Continued)

Illus. No.	Part No.	Description	Specifications	No. Req.
...	BZ 30378	Door glass gasket		1
...	BZ 30376	License lens		1
...	BZ 30381	License lens gasket		1
...	BZ 70001	Bulb	6-8 V.—15 C. P.	1
...	BZ 28068	Stop light switch		1
...	BZ 28084	Stop light switch bracket		1
...	BO 12126	Stop light switch to bracket screw	No. 10-32x $\frac{5}{8}$ "	2
...	BZ 12799	Stop light switch to bracket screw nut	No. 10-32x $\frac{1}{2}$ "	1
...	BZ 908	Stop light switch bracket to frame bolt	5/16"-18x $\frac{3}{8}$ "	1
...	BZ 122	Stop light switch bracket to frame bolt nut	5/16"-18x5/16"	1
...	BZ 31011	Stop light switch spring		1
...	BZ 28072	Stop light switch spring clip		1
...	BZ 18069	Stop light switch spring clip screw	No. 10-32x $\frac{3}{8}$ "	1
...	BZ 12799	Stop light switch spring clip screw nut	No. 10-32x $\frac{1}{8}$ "	1

COWL VENTILATOR

...	CO 81415	COVER ASSEMBLY		1
...	BO 81623	Cover hinge adjusting plate		2
...	BO 18464	Cover hinge adjusting plate screw		4
...	BO 12120	Cover hinge adjusting plate screw nut		4
...	BO 70519	Cover hinge adjusting plate rivet		2
...	BO 81628	Cover hinge R. H.—on cowl		1
...	BO 81629	Cover hinge L. H.—on cowl		1
...	BO 18419	Cover hinge rivet		4
...	BO 81644	Cover to instrument panel spring		2
...	BO 82524	Cover to instrument panel spring clip		2
...	BO 18453	Cover to instrument panel spring clip screw		2
...	BO 12120	Cover to instrument panel spring clip nut		2
...	BO 81636	Control bracket		1
...	BO 70028	Control bracket rivet		3
...	BO 81641	Drain pipe		1
...	BO 81669	Drain tube		1
...	BO 81675	Drain tube clip		3
...	BO 18459	Drain tube clip screw		3
...	BO 18479	Drain tube clip screw nut		3
...	BO 81667	Ventilator handle		1
...	BO 81645	Ventilator handle spring		1
...	BO 70499	Ventilator handle clevis pin		1

INSTRUMENTS AND MOUNTING

...	BO 29129	OIL PRESSURE GAUGE ASSEMBLY		1
...	BO 70124	Screw	No. 8-32x3/16" Rd. Hd.	2
...	BO 29130	AMMETER ASSEMBLY		1
...	BO 70124	Screw	No. 8-32x3/16" Rd. Hd.	2
...	BO 81812	MOTOR TEMPERATURE INDICATOR ASSEMBLY		1
...	BO 70124	Screw	No. 8-32x3/16" Rd. Hd.	2
...	BO 81811	GASOLINE AND OIL LEVEL GAUGE ASSEMBLY		1
...	BO 70124	Screw	No. 8-32x3/16" Rd. Hd.	2
...	BO 81817	SELECTOR SWITCH ASSEMBLY—gas and oil		1
...	BO 81815	INSTRUMENT LAMP AND SOCKET ASSEMBLY	6-8 V.—3 C. P. bulbs	1
...	BO 79601	Anchor clip—upper		3
...	BO 79602	Anchor clip—lower		3
...	BO 70398	Clinch nut	1/4"-20	6
...	BO 81826	INSTRUMENT FRAME AND MOUNTING ASSEMBLY (Coach, Sedan, Coupe, Phaeton, Roadster)		1
...	BO 81830	INSTRUMENT FRAME AND MOUNTING ASSEMBLY (Landau Sedan, Town Sedan and Victoria)		1
...	BO 18453	Screw—attaching	1/4"-20	5
...	BO 18461	Shakeproof lockwasher		5
...	BO 81819	Instrument panel escutcheon plate (Coach, Sedan, Coupe, Phaeton, Roadster)		1
...	BO 81820	Instrument panel escutcheon plate (Landau Sedan, Victoria, Town Sedan)		1
...	BO 81841	Dial—instrument frame		1
...	BO 81843	Rim—instrument frame (Coach, Sedan, Coupe, Phaeton, Roadster)		1
...	BO 81844	Rim—instrument frame (Landau Sedan, Victoria, Town Sedan)		1
...	BO 81846	Base—instrument frame		1
...	BO 79758	Glass—instrument frame		1

ACCESSORIES

The following units are considered accessories and are serviced by the manufacturers. Parts and complete assemblies should be obtained direct from them or one of their dealers.

When ordering give letter prefix with symbol number—Example: CX 28960.

AIR CLEANER

AC Spark Plug Co., Flint, Michigan.

BATTERY

The Electric Storage Battery Co., Philadelphia, Pa.

ELECTRICAL EQUIPMENT

Starting Motor, Generator, Distributor and Ignition Coil—The Electric Auto-Lite Co., Toledo, Ohio.

SPEEDOMETER

Stewart-Warner Speedometer Corp., Chicago, Ill.

VACUUM TANK

Stewart-Warner Speedometer Corp., Chicago, Ill.

WINDSHIELD CLEANER

Trico Products Corp., Buffalo, N. Y.

WIRING

Illus. No.	Part No.	Description	Specifications	No. Req.
1	BO 30584	Head lamp wire assembly—head lamp to main switch—R. H.		2
2	BO 30585	Head lamp wire assembly—head lamp to main switch—L. H.		2
3	BO 31416	Side lamp wire assembly—junction post to switch		1
4	BO 29826	Stop light wire assembly—stop light switch to stop light		1
5	BO 28074	Stop light wire assembly—stop light switch to main switch		1
6	BO 29825	Tail lamp wire assembly—tail lamp to main switch		1
7	BO 81815	Instrument lamp wire assembly—instrument lamp to junction post		1
...	BO 31416	Instrument lamp wire assembly—junction post to main switch		1
8	BO 82080	Dome lamp wire assembly—dome lamp to junction post (Coach, Sedan)		1
8	BO 82081	Dome lamp wire assembly—dome lamp to junction post (Coupe)		1
9	BO 79359	Dome lamp wire assembly—dome lamp to dome lamp switch		1
10	BO 80037	Dome lamp wire assembly—dome lamp switch to ground		1
11	BO 31418	Feed wire assembly—main switch to junction block		1
12	BO 31424	Feed wire assembly—ammeter to junction block		1
13	BO 31428	Feed wire assembly—generator to ammeter		1
14	BO 27811	Feed wire assembly—starter post to ammeter		1
15	BO 31406	Ignition wire assembly—ammeter to Electrolock		1
16	BO 31404	Ignition wire assembly—Electrolock to coil		2
...	BO 31406	Gasoline and oil gauge wire assembly—Electrolock to gauge		1
17	BO 31412	Gasoline and oil gauge wire assembly—oil pan unit to junction post		1
18	BO 31414	Gasoline and oil gauge wire assembly—junction block to gauge switch		2
19	BO 31426	Gasoline and oil gauge wire assembly—gasoline tank unit to junction block		1
20	BO 31422	Horn wire assembly—horn to junction block		1
21	BO 30823	Horn wire assembly—horn to horn button		1
22	BO 30098	Coil wire assembly—coil to distributor—high tension		1
...	BM 30099	CABLE TUBE AND WIRES ASSEMBLY (spark plug)		1
23	BM 29932	Cable tube		1
24	BM 29986	Cable No. 1		1
25	BM 29987	Cable No. 2		1
26	BM 29988	Cable No. 3		1
27	BM 29989	Cable No. 4		1
28	BM 29990	Cable No. 5		1
29	EM 29991	Cable No. 6		1
30	BZ 60648	BATTERY GROUND CONNECTION		1
31	BZ 29836	BATTERY CABLE AND CONDUIT ASSEMBLY (battery to starter)		1
32	BZ 31419	Clip—battery to starter cable		2
...	BZ 18069	Screw—battery to starter cable clip	No. 10-32x $\frac{3}{4}$ "	2

When ordering give letter prefix with symbol number—Example: CX 28960.

WIRING (Continued)

Illus. No.	Part No.	Description	Specifications	No. Req.
...	BZ 12799	Nut—battery to starter cable clip screw	No. 10-32x $\frac{1}{8}$ "	2
33	BM 219	Screw—battery ground connection	5/16"-18x $\frac{3}{4}$ "	1
...	BZ 122	Nut—battery ground connection screw	5/16"-18x5/16"	1
34	BZ 12843	Screw—battery terminal	5/16"-18x1 $\frac{1}{4}$ "	2
35	BZ 12844	Nut—battery terminal screw	5/16"-18x $\frac{1}{4}$ "	2
36	BO 29446	Clip—frame to tail, stop and gas gauge wires		2
37	GO 13733	Clip—frame to head and tail lamp wires		2
38	GZ 3613	Rubber ferrule	$\frac{7}{8}$ "	4
39	BO 30348	Cable and conduit—head lamp		2
40	BO 70349	Nut—conduit to radiator		2
41	BZ 30307	Junction post		1
...	BO 12126	Junction post screw		2
...	BZ 12799	Junction post screw nut		2
42	BZ 81817	Gasoline and oil gauge switch		1
43	BZ 30308	Lighting switch		1
44	BZ 70552	Electrolock coil wire screw		2
45	BZ 70553	Electrolock gas and oil gauge wire screw		1

TOOLS

...	CZ 31546	Tool box assembly (wire wheel and demountable at hub wheels). (Includes all tools excepting alemite gun)		1
...	CZ 31547	Tool box assembly (wood wheels, demountable rim). (Includes all tools excepting alemite gun)		1
...	BZ 30794	Starting crank and jack handle		1
...	BZ 29178	Jack		1
...	BZ 29179	Jack extension		1
...	BZ 63425	Oil can		1
...	BZ 28620	Oil can holder		1
...	BM 22594	Spark plug and main bearing nut wrench		1
...	BM 23692	Eccentric adjusting wrench		1
...	BM 8672	Water pump stuffing nut wrench		1
...	BZ 31149	Hub cap wrench (demountable rim wheels only)		1
...	BM 23389	Tappet adjusting wrench		1
...	BZ 28333	End wrench	No. 25 special	1
...	BZ 31356	Socket wrench assembly (includes pilots)		1
...	BZ 31357	Socket wrench assembly (less pilots)		1
...	BZ 31361	Socket wrench pilot		2

FLOOR MATS AND PADS

...	BO 81983	Front floor mat and pad assembly (Coach)		1
...	BO 81987	Front floor mat and pad assembly (Landau Sedan)		1
...	BO 81985	Front floor mat and pad assembly (Sedan, Coupe)		1
...	BO 81989	Front floor mat and pad assembly (Victoria)		1
...	BO 81990	Front floor mat and pad assembly (Town Sedan)		1
...	BO 81992	Front mat and pad assembly (Roadster and Phaeton)		1

ELECTROLOCK

...	BZ 31214	ELECTROLOCK ASSEMBLY		1
...	BZ 30734	Nut—Electrolock to instrument board		1
...	BO 31239	Electrolock cylinder		1
...	BZ 31240	Key		1
...	BZ 31487	Electrolock post		1
...	BZ 70553	Screw—oil control switch connection		1
...	BZ 70563	Shakeproof lockwasher—oil control switch connection		1
...	BZ 70551	Screw—coil connection		2
...	BZ 70550	Shakeproof lockwasher—coil connection		2

HORN

NOTE: The horn assembly and the bracket are serviced by the Hudson Motor Car Co. All other parts are furnished by the E-A Laboratories Co., Brooklyn, N. Y.

...	BZ 30780	HORN AND BRACKET ASSEMBLY		1
...	BZ 30781	Bracket		1
...	BM 13073	Bracket stud	5/16"-18x1 $\frac{1}{2}$ "	2
...	BZ 122	Bracket stud nut	5/16"-18x5/16"	2

SHOCK ABSORBERS

...	BZ 30902	Shock absorber unit assembly—front R. H.		1
...	BZ 30903	Shock absorber unit assembly—front L. H.		1
...	BZ 30904	Shock absorber unit assembly—rear R. H.		1

When ordering give letter prefix with symbol number—Example: CX 28960.

SHOCK ABSORBERS (Continued)

Illus. No.	Part No.	Description	Specifications	No. Req.
...	BZ 30905	Shock absorber unit assembly—rear L. H.		1
...	BZ 31818	Shock absorber arm—front unit—R. H.		1
...	BZ 31819	Shock absorber arm—rear unit		2
...	BZ 31822	Shock absorber tie rod—front unit		2
...	BZ 31823	Shock absorber tie rod—rear unit		2
...	BZ 31824	Shock absorber tie rod flexible joint—large—rubber		4
...	BZ 31825	Shock absorber tie rod flexible joint—small—rubber		4
...	BZ 31826	Shock absorber tie rod flexible joint washer		16
...	BZ 30906	Shock absorber tie rod anchor—front to axle		2
...	BZ 30909	Shock absorber tie rod anchor—rear to axle—R. H.		1
...	BZ 30910	Shock absorber tie rod anchor—rear to axle—L. H.		1
...	BZ 31830	Shock absorber cover		4
...	BZ 31831	Shock absorber cover cap screw		12
...	BZ 31832	Shock absorber shaft and lever		4
...	BZ 31833	Shock absorber shaft end play spring		4
...	BZ 31834	Shock absorber shaft oil seal		4
...	BZ 31835	Shock absorber shaft oil seal retainer		4
...	BZ 31836	Shock absorber shaft bushing		4
...	BZ 31837	Shock absorber piston assembly—front		2
...	BZ 31838	Shock absorber piston assembly—rear		2
...	BZ 31839	Shock absorber piston spring		4
...	BZ 31861	Shock absorber cylinder end plug		8
...	BZ 31850	Shock absorber cylinder end plug gasket		8
...	BZ 31840	Shock absorber throttle valve adjusting screw		4
...	BZ 31841	Shock absorber throttle valve adjusting screw lock nut		4
...	BZ 31842	Shock absorber throttle valve cap		4
...	BZ 31843	Shock absorber throttle valve cap gasket		8
...	BZ 31859	Shock absorber arm—front unit—L. H.		1
...	BZ 31860	Shock absorber cover gasket		1
...	BZ 31861	Shock absorber filler plug		1
...	BZ 31862	Shock absorber filler plug gasket		1
...	BZ 31863	Shock absorber shaft thrust washer		1
...	BZ 31864	Shock absorber shaft nut		4
...	BZ 31844	Shock absorber relief valve steel ball		4
...	BZ 31845	Shock absorber relief valve steel disc		4
...	BZ 31846	Shock absorber relief valve spring		4
...	BZ 31847	Shock absorber relief valve cap		4

TRUNK RACK

...	CZ 81895	Trunk rack complete		1
...	CZ 81918	Trunk rack frame and supports assembly		1
...	BZ 81694	Trunk rack support		2
...	BZ 81695	Trunk rack support bracket		2
...	BR 1308	Trunk rack support bracket bolt		2
...	BO 70047	Trunk rack support bracket bolt nut		2
...	BZ 70507	Trunk rack support bolt		2
...	BM 108	Trunk rack support bolt nut		2
...	BZ 81696	Trunk rack support loop		2
...	BZ 70527	Trunk rack support loop bolt		4
...	BO 70047	Trunk rack support loop bolt nut		4
...	BZ 81697	Trunk rack clevis		2
...	BZ 549	Trunk rack clevis pin		2
...	BZ 70508	Trunk rack clevis bolt		2
...	BZ 82431	Trunk bracket (Victoria)		2

RUMBLE SEAT STEPS

...	BZ 81835	Upper step		1
...	BZ 70381	Screw	F. H.—5/16"-18x1 3/4"	1
...	BZ 122	Nut	5/16"-18x5/16"	3
...	BZ 81836	Lower step		1
...	BZ 70238	Screw	F. H.—3/8"-16x1-13/16"	1
...	BZ 9666	Nut	3/8"-16	1
...	BZ 81698	Lower step bracket	3/8"-16x1 3/4"	1
...	BO 2936	Bolt		1
...	BZ 79791	Washer—step bolt angle		2
...	BO 70047	Nut	3/8"-16	2
...	BZ 80292	Lower step arm		1
...	BZ 636	Key	Woodruff No. 11	1
...	BZ 30003	Lower step arm nut		1

When ordering give letter prefix with symbol number—Example: CX 28960.

FRONT AXLE—R. H. DRIVE

Illustr. No.	Part No.	Description	Specifications	No. Req.
---	CX 31094	FRONT AXLE ASSEMBLY		1
---	BX 28968	Steering arm—L. H.		1
---	BZ 31208	Steering arm—R. H.		1

FRAME—R. H. DRIVE

---	CF 31025	SIDE MEMBER ASSEMBLY—R. H.		1
-----	----------	----------------------------	--	---

TRANSMISSION—R. H. DRIVE

---	CT 31231	TRANSMISSION ASSEMBLY	4-1/13 to 1 R. A. ratio	1
---	CT 31229	TRANSMISSION ASSEMBLY	4-5/12 to 1 R. A. ratio	1
---	GT 31087	Transmission case		1
---	BT 31137	Front bearing cap		1
---	BT 31144	CLUTCH THROWOUT YOKE ASSEMBLY		1

STEERING GEAR—R. H. DRIVE

---	CZ 31650	STEERING GEAR COMPLETE		1
---	CZ 30494	CONTROL ASSEMBLY		1
---	CZ 31652	CASE AND GEARS COMPLETE		1
---	BZ 31654	CASE ASSEMBLY		1
---	BZ 31674	Oil retainer—lower control bracket		1
---	BZ 31662	Case cover		1
---	BZ 63385	Gasket—case cover		1
---	BZ 29773	Bracket—frame		1
---	BZ 31665	Main column tube		1
---	BZ 31667	Worm		1
---	BZ 31657	Adjusting sleeve assembly (Includes cups)		1
---	BZ 31658	Roller tooth and shaft assembly		1
---	BZ 29782	Bushing—roller tooth and shaft		2
---	BZ 29785	Thrust washer—roller tooth shaft		1
---	BZ 29784	Screw—roller tooth adjusting		1
---	BZ 31671	Arm—roller tooth shaft (steering)		1
---	CZ 30787	Jacket tube and bushing assembly		1
---	BZ 30666	Bushing—jacket tube		1
---	BZ 30529	Stationary tube assembly		1
---	BZ 30530	Throttle tube assembly		1
---	BZ 30537	Spark tube assembly		1
---	BZ 30536	Spark lever—upper		1
---	BZ 29728	Spark tube pinion		1
---	BZ 30819	Insulator washer—lower		2
---	BZ 30533	Horn button contact cup		1
---	BZ 30534	Horn button		1
---	BZ 30453	Spark and throttle control name plate		1
---	BZ 26157	Horn button lock ring		1
---	BZ 10149	Horn button spring		1
---	BZ 30822	Horn wire assembly		1

DRAG LINK—R. H. DRIVE

---	CZ 31211	DRAG LINK ASSEMBLY		1
---	CZ 31213	Drag link		1

SPARK AND THROTTLE CONTROL—R. H. DRIVE

SPARK CONTROL				
---	BZ 29465	Steering gear to distributor rod		1
---	BM 794	Nut	1/4"-28x7/32"	1
---	BZ 12799	Nut	No. 10-32x1/8"	1
---	BZ 70150	Ball joint	No. 10-32 special	1
THROTTLE CONTROL				
---	BZ 29463	Steering gear to carburetor rod		1
---	BM 794	Nut	1/4"-38x7/32"	1
---	BZ 13578	Yoke		1
---	BZ 29461	Collar		1
---	BZ 29460	Trunnion		1
---	BZ 13579	Clevis pin	3/16"x1-1/16"	1
---	BZ 13542	Spring		1
ACCELERATOR				
---	BZ 29812	Pedal		1
---	BZ 7911	Pedal taper pin	No. 00x3/4"	1
---	BZ 31084	Shaft		1
---	BZ 30191	Spring		1
---	BZ 25364	Lever—short		1

When ordering give letter prefix with symbol number—Example: CX 28960.

SPARK AND THROTTLE CONTROL—R. H. DRIVE (Continued)

Illus. No.	Part No.	Description	Specifications	No. Req.
...	BZ 60574	Lever—long		1
...	BZ 7911	Lever taper pin	No. 00x $\frac{3}{4}$ "	2
...	BZ 29455	Pedal to carburetor rod		1
...	BZ 5771	Pedal to carburetor rod yoke	3/16"-32	1
...	BZ 12799	Pedal to carburetor rod nut	No. 10-32x $\frac{1}{8}$ "	1
...	BZ 5825	Pedal to carburetor rod clevis pin	3/16"x11/16"	2

HAND BRAKE LEVER—R. H. DRIVE

...	GS 29066	HAND BRAKE LEVER ASSEMBLY		1
...	BS 29068	Hand brake lever		1

PEDAL CONTROL—R. H. DRIVE

...	GZ 31030	PEDAL CONTROL ASSEMBLY		1
...	GZ 31034	Brake pedal assembly		1
...	BX 18341	Brake pedal set screw	$\frac{3}{8}$ "-16x1 $\frac{1}{2}$ "	1
...	BZ 5402	Brake pedal set screw nut	$\frac{3}{8}$ "-16x3/16"	1
...	BZ 1015	Brake pedal taper pin	No. 2x1 $\frac{1}{4}$ "	1
...	BZ 115	Brake pedal key	Woodruff No. 9	1
...	GZ 31160	Brake pedal lever		1
...	BZ 1015	Brake pedal lever taper pin	No. 2x1 $\frac{1}{4}$ "	1
...	BZ 115	Brake pedal lever key	Woodruff No. 9	1
...	BZ 25447	Brake pedal bushing		1
...	GZ 31033	Clutch pedal assembly		1
...	GZ 31041	Pedal shaft		1
...	GZ 31043	Bracket		1
...	BR 1308	Bracket bolt	$\frac{3}{8}$ "-16x1 $\frac{1}{2}$ "	1
...	GZ 9836	Bracket bolt	$\frac{3}{8}$ "-16x1"	3
...	GZ 24888	Bracket bushing		1
...	BZ 29544	Clutch pedal link		1
...	BZ 62	Clutch pedal link nut	$\frac{3}{8}$ "-24	1
...	BY 3212	Clutch pedal link clevis pin	$\frac{3}{8}$ "x1-3 32"	1
...	BZ 29540	Clutch pedal adjustable link		1
...	BY 3212	Clutch pedal adjustable link clevis pin	$\frac{3}{8}$ "x1-3 32"	1

BRAKE CONTROL

(R. H. D. parts that differ from L. H. D.)

...	BZ 31195	BRAKE CROSS SHAFT BEARING PLATE ASSEM-BLY—front center		1
...	BZ 31193	Brake cross shaft—front		1
...	BZ 31194	Brake cross shaft—rear		1
...	BZ 31197	Brake cross shaft to pedal lever		1
...	BZ 31199	Brake rod—pedal to brake cross shaft		1

RUBBER MATS AND FELT PADS—R. H. DRIVE

...	BO 81984	FRONT MAT AND PAD ASSEMBLY (Coach)		1
...	BO 81988	FRONT MAT AND PAD ASSEMBLY (5-Pass. Landau Sedan)		1
...	BO 81986	FRONT MAT AND PAD ASSEMBLY (Sedan, Coupe)		1
...	BO 81991	FRONT MAT AND PAD ASSEMBLY (Town Sedan)		1
...	BO 81993	FRONT MAT AND PAD ASSEMBLY (Roadster, Phaeton)		1

When ordering give letter prefix with symbol number—Example: CX 28960.